

DFL-210 - Port Forwarding

In order to enable port forwarding you need to create two rules on the DFL-210. The first rule is for service to Static Address Translation (SAT) and the second rule is for Network Address Translation (NAT) to Static Address Translation.

The first rule is created using the following steps:

- Under Rules/IP Rules/wan_to_lan add a new rule
- Under the general tabName = enter desired nameAction = SAT
 - Service = Select the desired service
 - Schedule = Select the desired schedule or None
 - Source interface = any
 - Source Network = all-nets (you specify a specific inbound address or range)
 - Destination Interface = core
 - Destination Network = wan_ip3. Under SAT tab *ALL - NETS*
- Under the SAT tab
 - check destination IP address
 - New IP Address = the address you want to forward to
 - New Port = the port you want to forward to
 - Create the rule by clicking OK.

The second rule is created using the following steps:

- Under Rules/IP Rules/wan_to_lan add a new rule
- Under the general tabName = enter desired nameAction = Allow
 - Service = Select the desired service
 - Schedule = Select the desired schedule or None
 - Source interface = any
 - Source Network = all-nets (you specify a specific inbound address or range)
 - Destination Interface = core
 - Destination Network = wan_ip

Create the rule by clicking OK.

Activate the configuration by using the Configuration/Save and Activate menu item.